## How to upgrade H501W and H218W

- 1. Download and run .exe file.
- 2. Enter LAN IP address of camera.

Enter correct username and password, for example, admin; 123456

TransitTool		Antonio (1983)	
Server IP	192, 168, 0, 158		
UserName	admin	Password *****	
File			
			Send
			Exit

3. Choose the file and click "Send"

🔀 打开	×
查找范围(I): 🌗 H501W	▼ = 1 →
名称	修改日期
web.bin	2012/4/13 10:44
✓	▶

4. Wait for uploading. When it is finished, it will prompt success.



Please note:

(1). Please use wired connection method before upgrading the files.

(2). Never shut down the power of the camera during upgrade until the camera restarts and gets connected.